ERSATZTEILLISTE
OKIFAX OF-18

SPARE PARTS LIST
OKIFAX OF-18

M-OSD-10053-10

ÜBERBLICK (OVERVIEW)

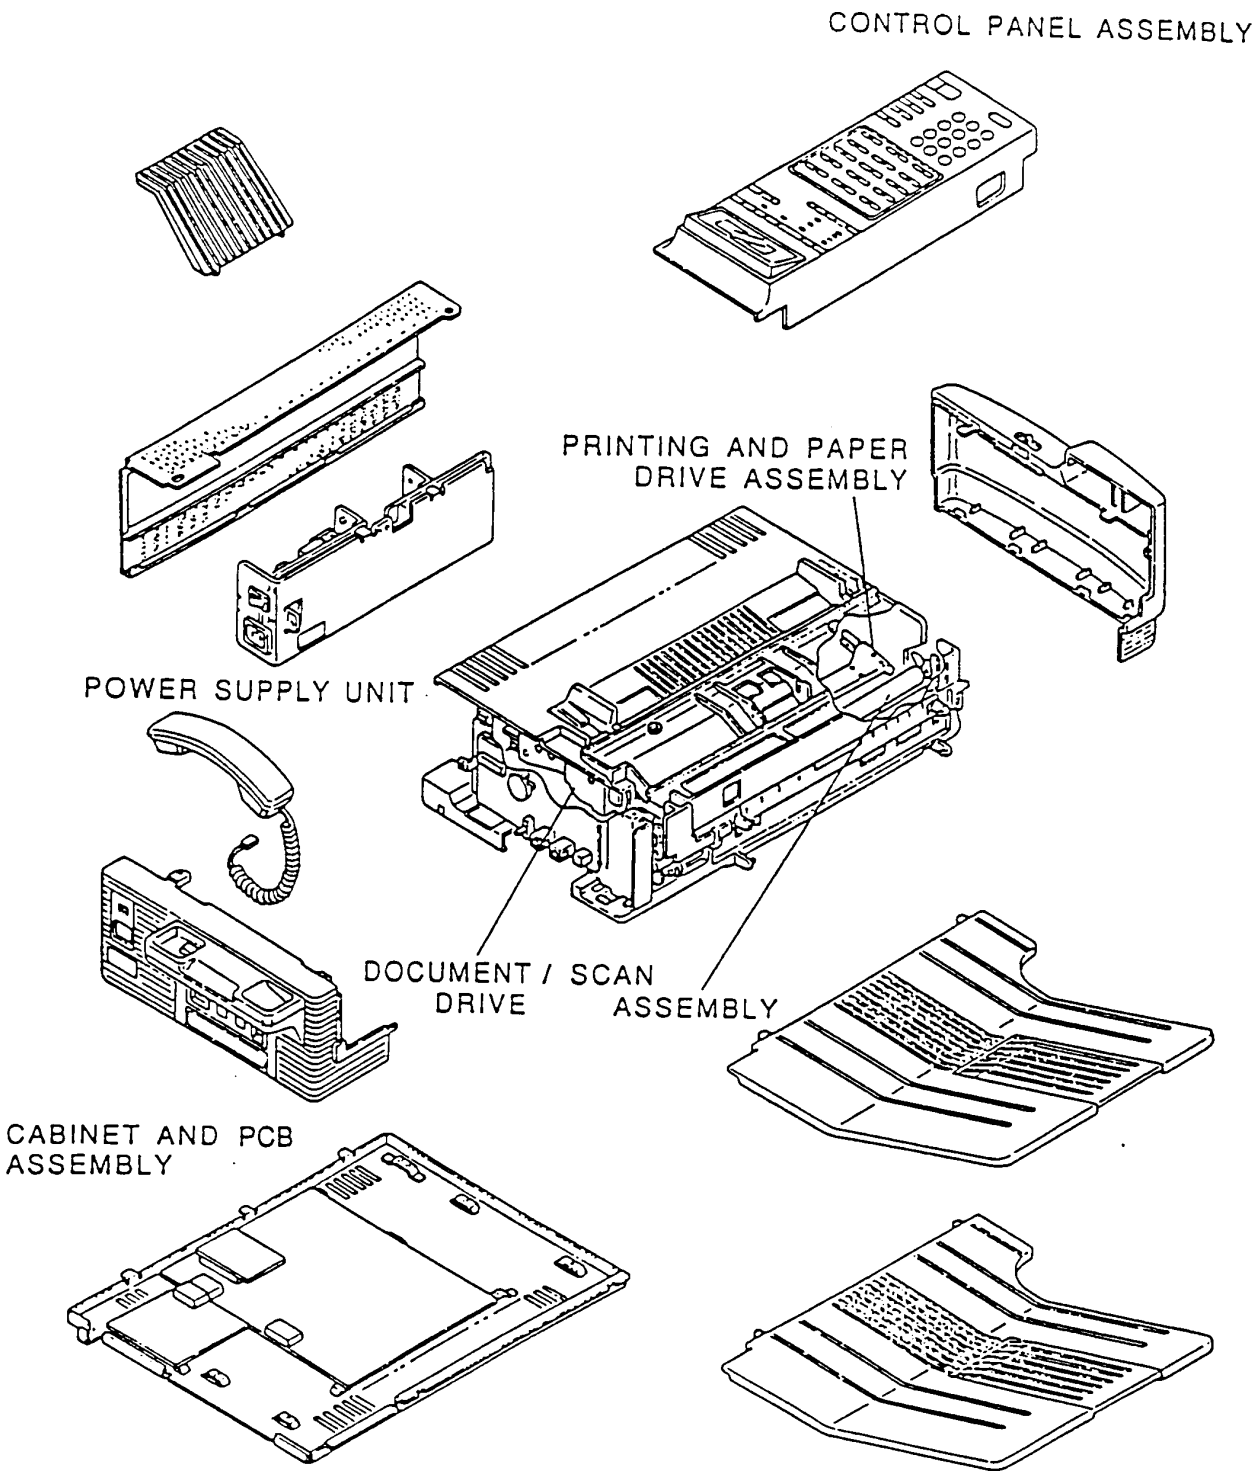

ZEICHNUNG 1 - CABINET AND PCB ASSY (FIGURE 1 - CABINET AND PCB ASSY)

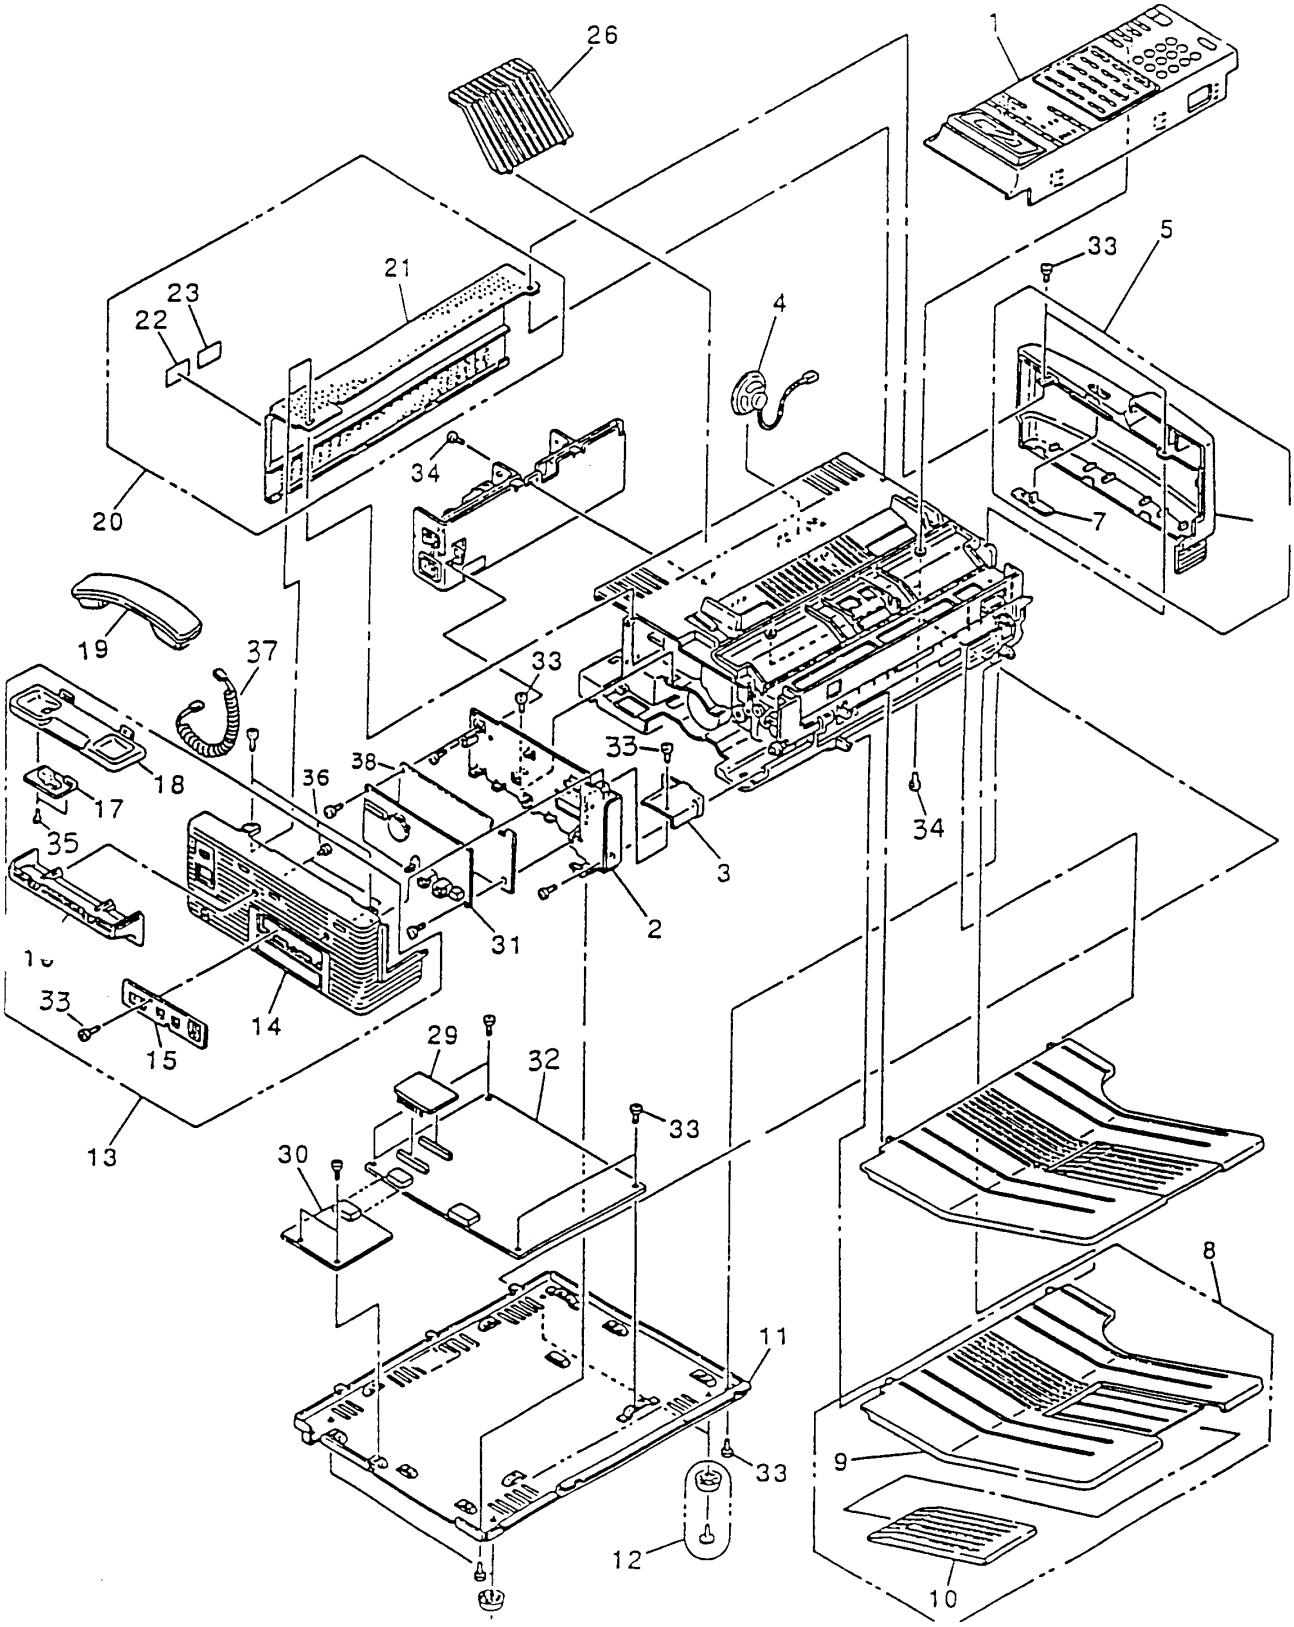

LISTE 1 - CABINET AND PCB ASSY (TABLE 1 - CABINET AND PCB ASSY)

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
1	CONTROL PANEL ASSY	4YB3512-1980G2
2	NCU BRACKET	2PP3512-4488P1
3	MOTOR BRACKET	3PP3512-4602P1
4	SPEAKER ASSY	4YS3512-1528P1
5	FRONT COVER ASSY (ENTHÄLT NR. 6 + 7)	3PA3512-4548G4
6	FRONT COVER	1PP3512-4509P3
7	RELEASE LEVER	3PP3512-4513P3
8	STACKER ASSY (ENTHÄLT NR. 9 + 10)	3PA3512-4601G1
9	STACKER	1PP3512-4527P1
10	SUB-STACKER	3PP3512-3026P2
11	BASE COVER	1PP3512-4491P1
12	PLASTIC FOOT	134A1071P0001
13	REAR COVER ASSY (ENTHÄLT NR.14-18, 33,35,36)	3PA3512-4549G4
14	REAR COVER	1PP3512-4512P4
15	MODULAR COVER	3PP3512-4525P13
16	CRADLE BASE	2PP3527-5205P1
17	HS-32-PCB	4YB3512-1972G2
18	CRADLE COVER	1PP3527-5206P1
19	HANDSET	4YB3512-2029G2
20	SIDE COVER ASSY (R) (ENTHÄLT NR. 21,22,23)	3PA3512-4629G5
21	SIDE COVER (R)	1PP3512-4510P4
22	MODEL NAME PLATE (OKI)	3PP3522-3716P3
23	ISPECTION LABEL	4PP3522-3273P1
26	SUB-TRAY	3PP3512-3856P1
30	PCB (NCU(B)-32I)	4YU3512-1952G4
31	PCB (NCU(A)-32I)	4YU3512-1951G4
32	MCNT-32-PCB	4YU3512-1946G4
33	SCREW	+D3-6-F
34	TAPPING SCREW	+BTP(WH)3-8-F
35	TAPPING SCREW	+TTP3-6-HHC
36	TAPPING SCREW	+TTP4-10-HHC
37	HANDSET CORD	4YS3522-1252G4
38	MYLER, NCU	3PP3512-4643P1

ZEICHNUNG 2 - CONTROL PANEL ASSY (FIGURE 2 - CONTROL PANEL ASSY)

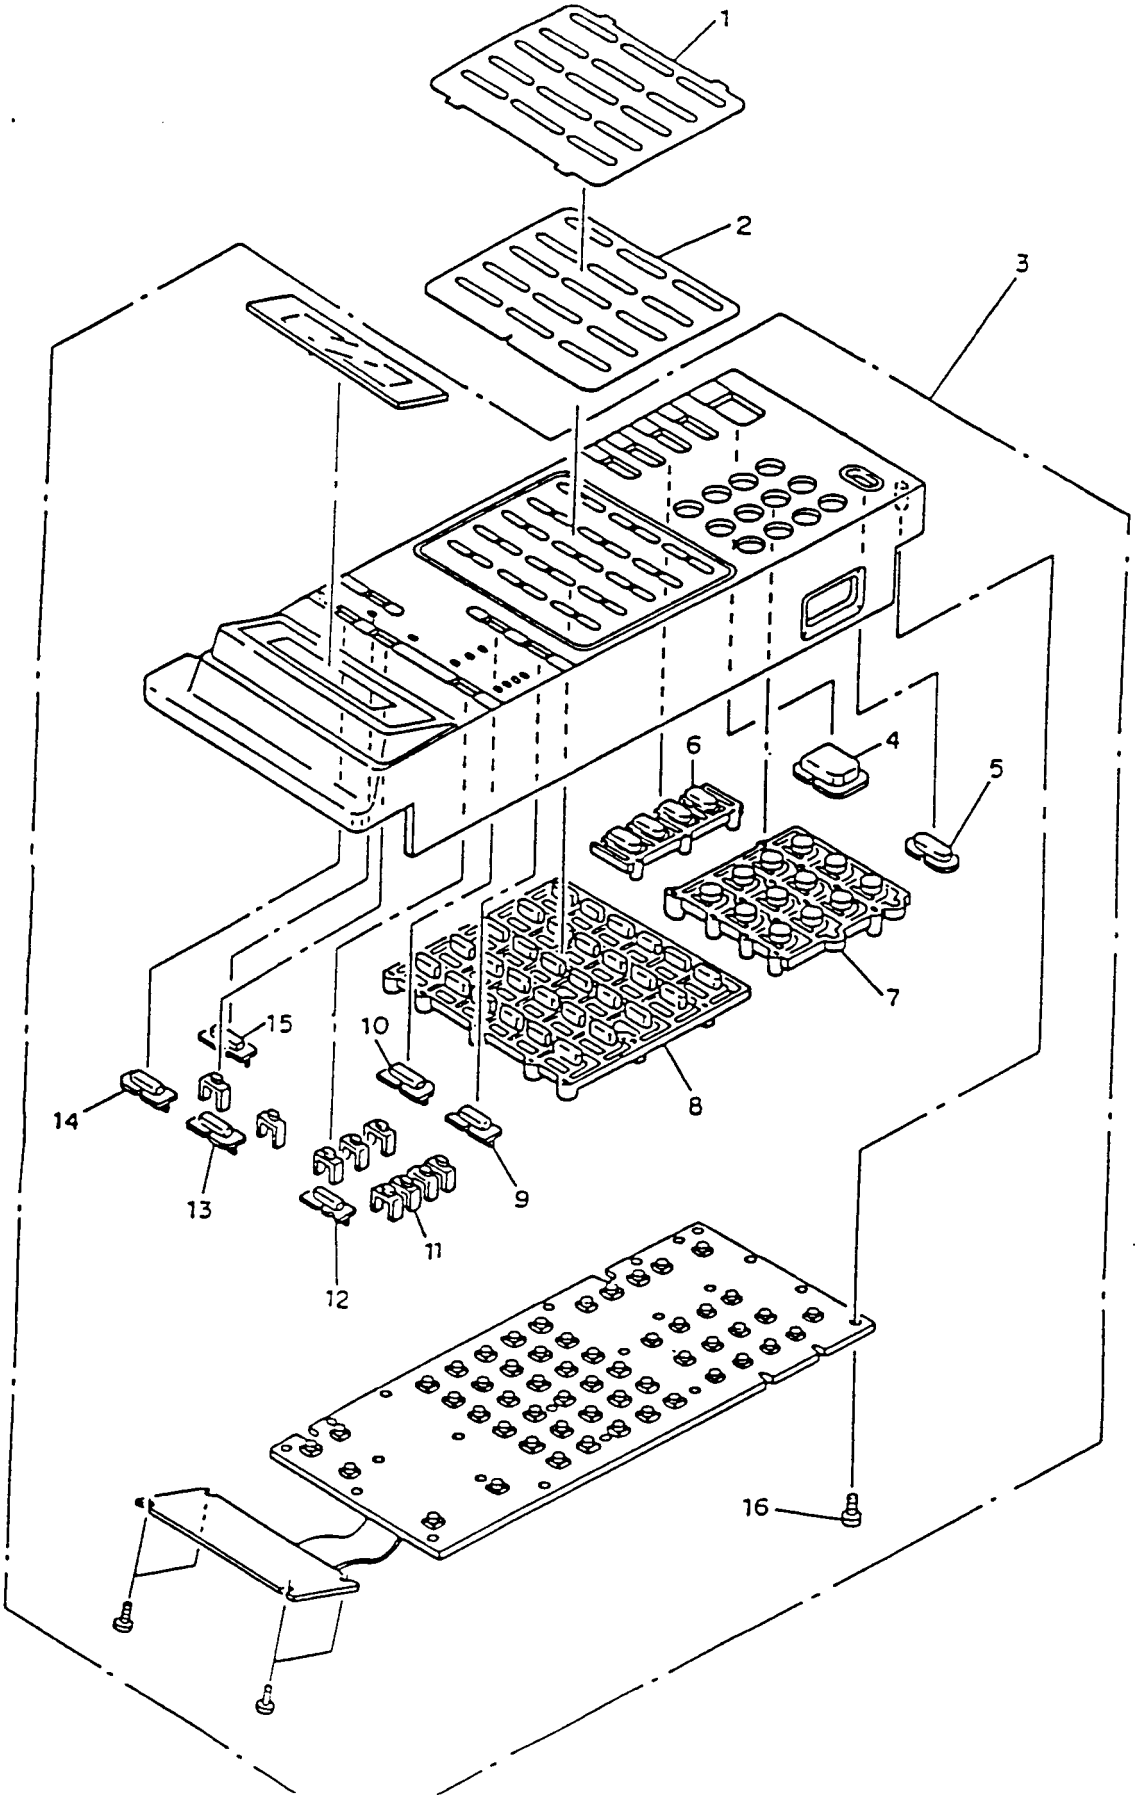

LISTE 2 - CONTROL PANEL ASSY (TABLE 2 - CONTROL PANEL ASSY)

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
1	PANEL COVER	4PP3512-4620P1
2	PANEL COVER SHEET	4PP3512-4623P1
3	CONTOL PANEL SUB ASSY	4YB3512-2046G1
4	KEY BUTTON - START	4PP3512-4666P2
5	KEY BUTTON - STOP	4PP3512-4667P1
6	KEY BUTTON - FUNCTION (A)	4PP3512-4668P2
7	KEY BUTTON - TENKEY	3PP3512-4669P2
8	KEY BUTTON - ONE TOUCH	3PP3512-4670P1
9	KEY BUTTON - TRANSMIT	4PP3512-4671P2
10	KEY BUTTON - TYPE OF ORIGINAL	4PP3512-4672P2
11	LED LENS	4PP3512-4677P2
12	KEY BUTTON - FUNCTION	4PP3512-4673P2
13	KEY BUTTON - HYPEN	4PP3512-4674P2
14	KEY BUTTON - SEARCH	4PP3512-4675P2
15	KEY BUTTON - AUTO REC	4PP3512-4676P2
16	TAPPING SCREW	+TTP2-6-I0F

ZEICHNUNG 3 - DOCUMENT DRIVE AND SCAN ASSY
(FIGURE 3 - DOCUMENT DRIVE AND SCAN ASSY)

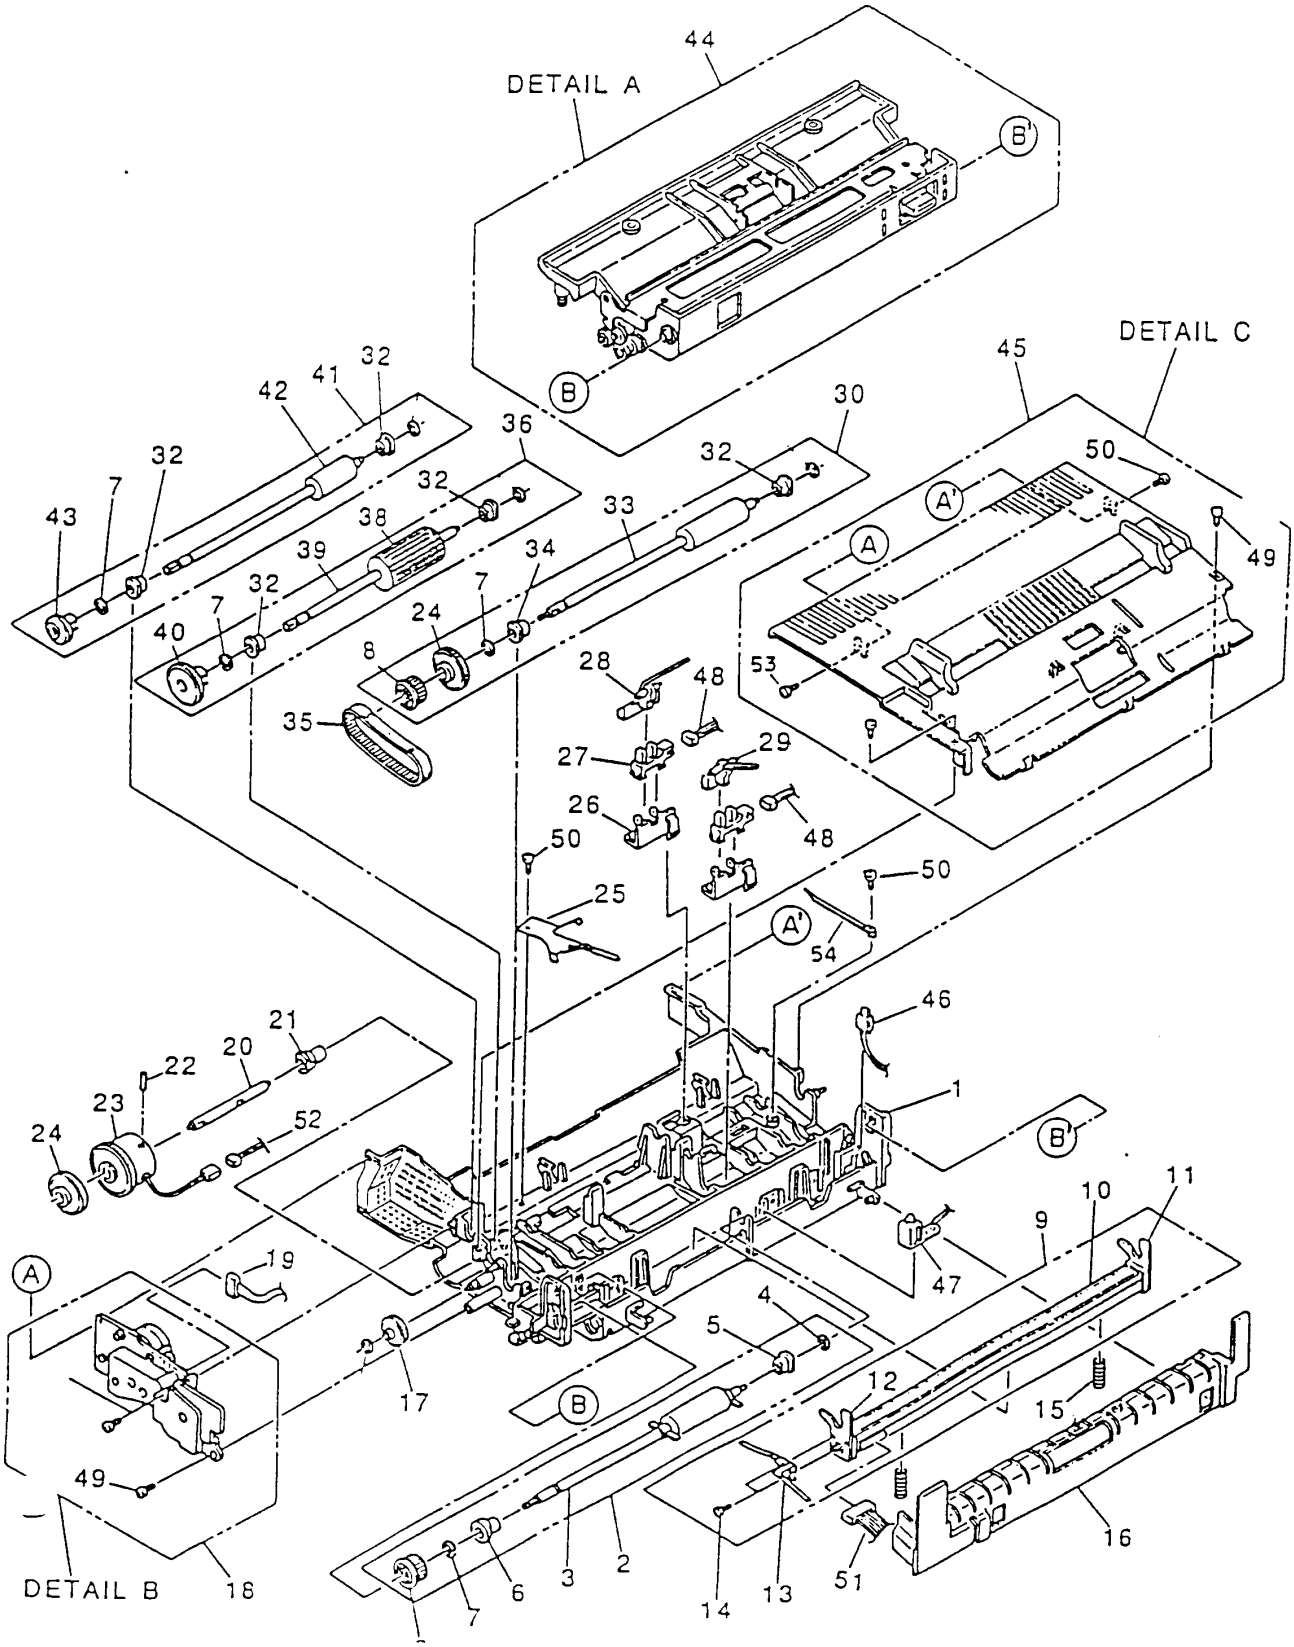

LISTE 3 - DOCUMENT DRIVE AND SCAN ASSY
(TABLE 3 - DOCUMENT DRIVE AND SCAN ASSY)

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
1	MECHANICAL FRAME (U)	1PP3512-4501P1
2	FEED ROLLER ASSY (B) (ENTHÄLT NR. 3-8)	3PA3512-4556G1
3	FEED ROLLER (B)	3PP3512-4449P1
5	METAL BUSHING	4PP3512-4480P1
6	METAL BUSHING	4PP3512-3750P2
7	E-RING	RE5-SUS
8	ROLLER FEED PULLEY	4PP3512-3728P1
9	SCAN ASSY (ENTHÄLT NR. 10-14)	3PA3512-4562G1
10	SCAN UNIT	4YB3512-1984G1
11	SCAN BRACKET (R)	4PP3512-4479P1
12	SCAN BRACKET (L)	4PP3512-4479P2
13	EARTH PLATE (SCAN)	4PP3512-4521P1
14	SCREW	+P(SW)2.6-6-HHC
15	SCAN SPRING	4PP3512-4530P1
16	EXIT GUIDE (D)	1PP3512-4469P1
17	GEAR (Z23)	4PP3522-3475P1
18	SCAN MOTOR ASSY (SIEHE SEITE 13 + 14)	3PA3512-4552G1
19	SCAN CABLE (MCNT-MOTOR)	4YS3512-1968P1
20	CLUTCH SHAFT	4PP3512-4475P1
21	METAL BUSHING	4PP3512-4450P1
22	SCREW SET	140A1090P0002
23	CLUTCH	4YB3512-1988P1
24	GEAR (Z28)	4PP3527-5029P1
25	EARTH PLATE (ADF)	3PP3512-4522P1
26	PHOTO HOLDER	3PP3512-4538P1
27	PHOTO SENSOR	4YB3512-1987P1
28	PC1 LEVER	4PP3512-4533P1
29	PC2 LEVER	4PP3512-4534P1
30	FEED ROLLER ASSY (A) (ENTHÄLT NR. 7,8,24,31-34)	3PA3512-4555G1
32	BEARING	4PP3522-3568P1
33	FEED ROLLER	3PP3512-4445P1
34	METAL BUSHING	4PP3512-4450P1

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
35	FEED ROLLER BELT	152A1013P0007
36	ADF ROLLER ASSY (ENTHÄLT NR. 7,32,37-40)	3PA3512-4554G1
38	ADF ROLLER	4PP3527-5133P1
39	ADF SHAFT	3PP3512-4446P1
40	GEAR (Z30)	4PP3527-5028P1
41	SUB-ROLLER ASSY (ENTHÄLT NR. 7,31,32,42,43)	3PA3512-4553G1
42	SUB ROLLER	3PP3512-4451P1
43	GEAR B (Z20)	4PP3527-5031P1
44	PAPER GUIDE ASSY (SIEHE SEITE 11 + 12)	1PA3512-4628G3
45	PAPER COVER ASSY (SIEHE SEITE 15 + 16)	3PA3512-4551G4
46	CABLE, SW7	4YS3512-1974P1
47	STAMP ASSY	4YB3522-1223G2
48	CABLE	4YS3512-1965P1
49	SCREW	+D3-6-F
50	TAPPING SCREW	+BTP(WH)3-8-F
51	CABLE, MCNT-SNS	4YS3512-1970P1
52	CABLE, MCNT-CLUTCH	4YS3512-1973P1
53	SCREW	+D3-10-F
54	CABLE CLAMPER	123A1001P0001

ZEICHNUNG 4 - DETAIL A: PAPER GUIDE ASSY (FIGURE 4 - DETAIL 1: PAPER GUIDE ASSY)

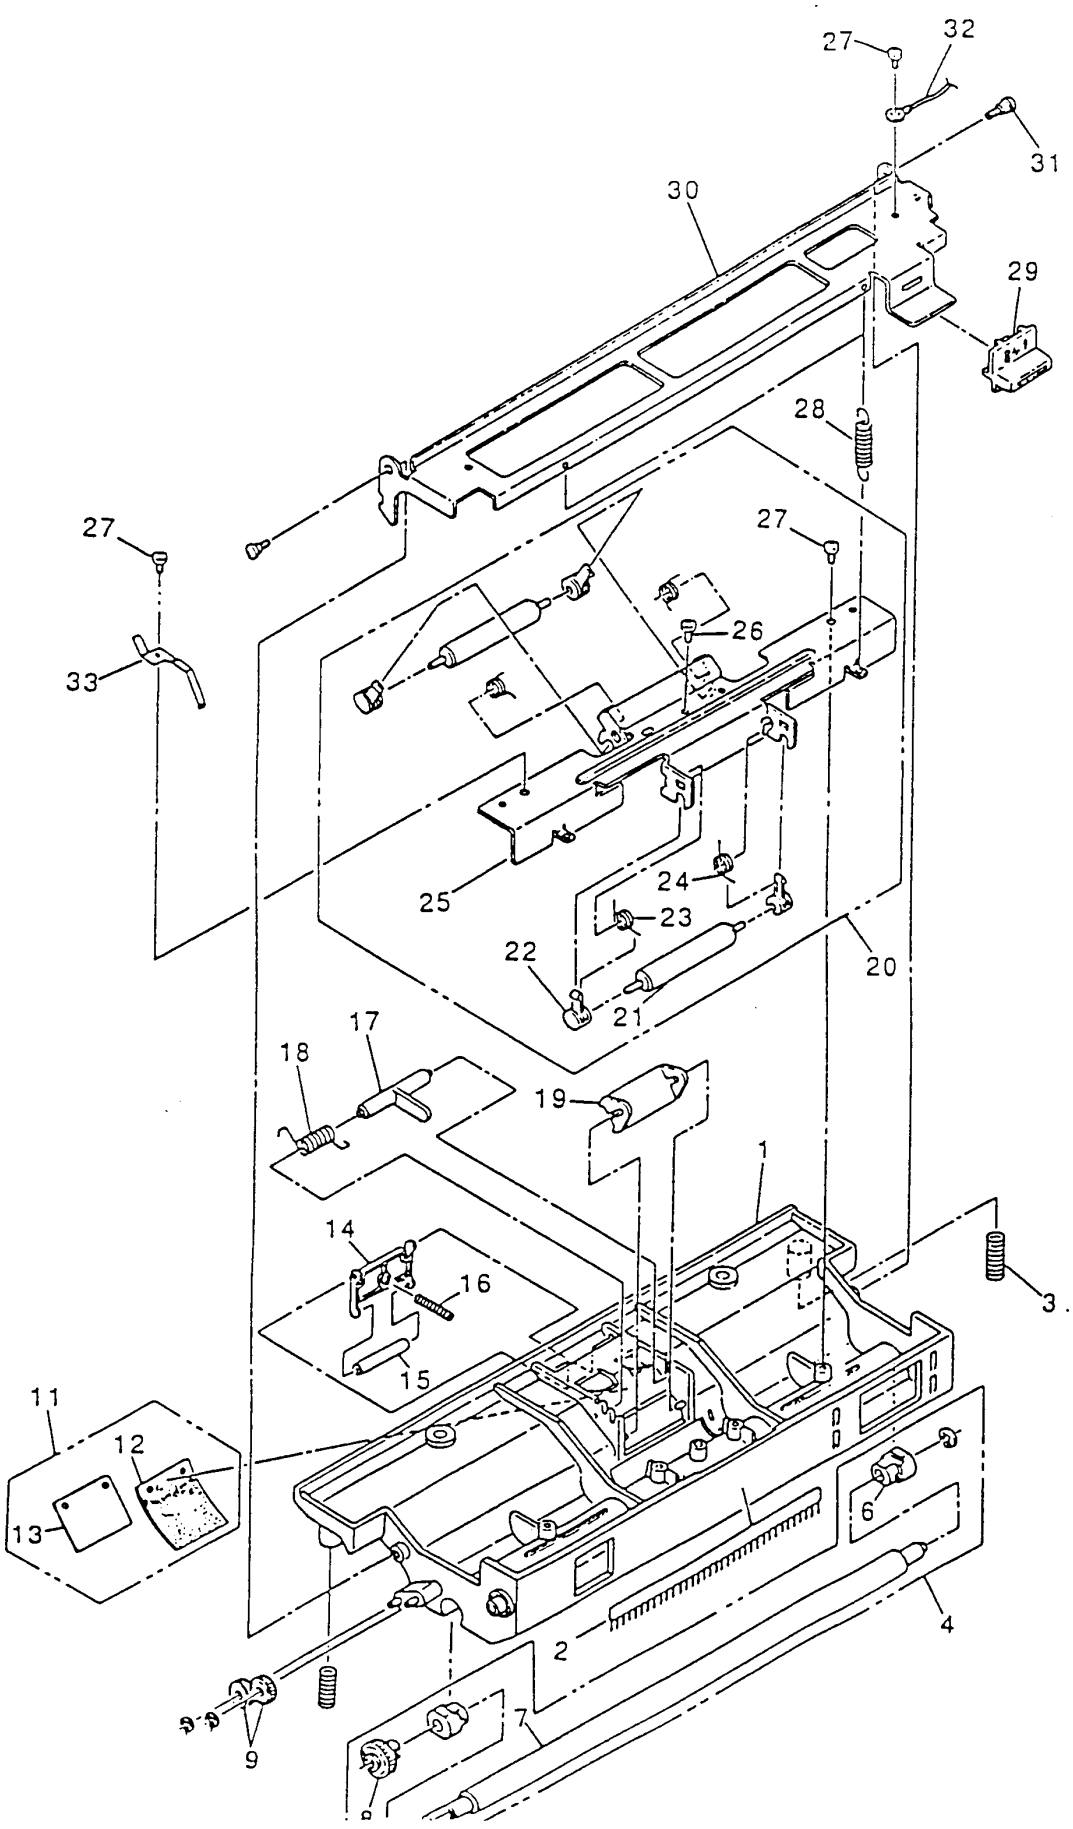

LISTE 4 - DETAIL A: PAPER GUIDE ASSY (TABLE 4 - DETAIL A: PAPER GUIDE ASSY)

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
1	PINCH ROLLER GUIDE	1PP3512-4470P1
2	EARTH BRUSH	4PP3512-3143P2
3	RELEASE SPRING (D)	4PP3512-4570P1
4	SCAN ROLLER ASSY (ENTHÄLT NR. 5-8)	3PA3512-4557G1
6	METAL BRUSHING	4PP3512-4573P1
7	SCAN ROLLER	3PP3512-4447P1
8	GEAR B (Z20)	4PP3527-5031P1
9	GEAR (Z16)	4PP3527-5034P1
11	SEPARATION RUBBER ASSY (ENTHÄLT NR. 12 + 13)	4PA3512-4683G1
12	SEPARATION RUBBER	4PP3512-4685P1
13	ADF MYLER	4PP3512-4684P1
14	ASSIST BRACKET	3PP3512-4473P1
15	ASSIST ROLLER	4PP3512-4474P1
16	ASSIST SPRING	4PP3512-4571P1
17	PRESSURE BAR	4PP3512-3037P1
18	ADF SPRING	4PP3512-4618P1
19	BACK UP BRACKET	3PP3512-3019P1
20	PINCH ROLLER ASSY (ENTHÄLT NR. 21-25)	3PA3512-4559G1
21	PINCH ROLLER	4PP3512-4678P1
22	PINCH GUIDE	4PP3527-5222P1
23	PINCH SPRING	4PP3512-4494P6
24	PINCH SPRING	4PP3512-4494P5
25	PINCH ROLLER BRACKET	2PP3512-4472P1
26	SCREW	+D3-6-F
27	TAPPING SCREW	+BTP(WH)3-8-F
28	ADF RELEASE SPRING	4PP3512-4568P1
29	PINCH RELEASE BUTTON	3PP3512-4526P4
30	PINCH RELEASE HOOK	2PP3512-4471P1
31	SHOULDER SCREW	4PP3512-3367P2
32	EARTH CABLE	4PP3512-4572P2
33	EARTH PLATE (D)	4PP3512-4626P1

ZEICHNUNG 5 - DETAIL B: MOTOR, SCAN ASSY (FIGURE 5 - DETAIL B: MOTOR, SCAN ASSY)

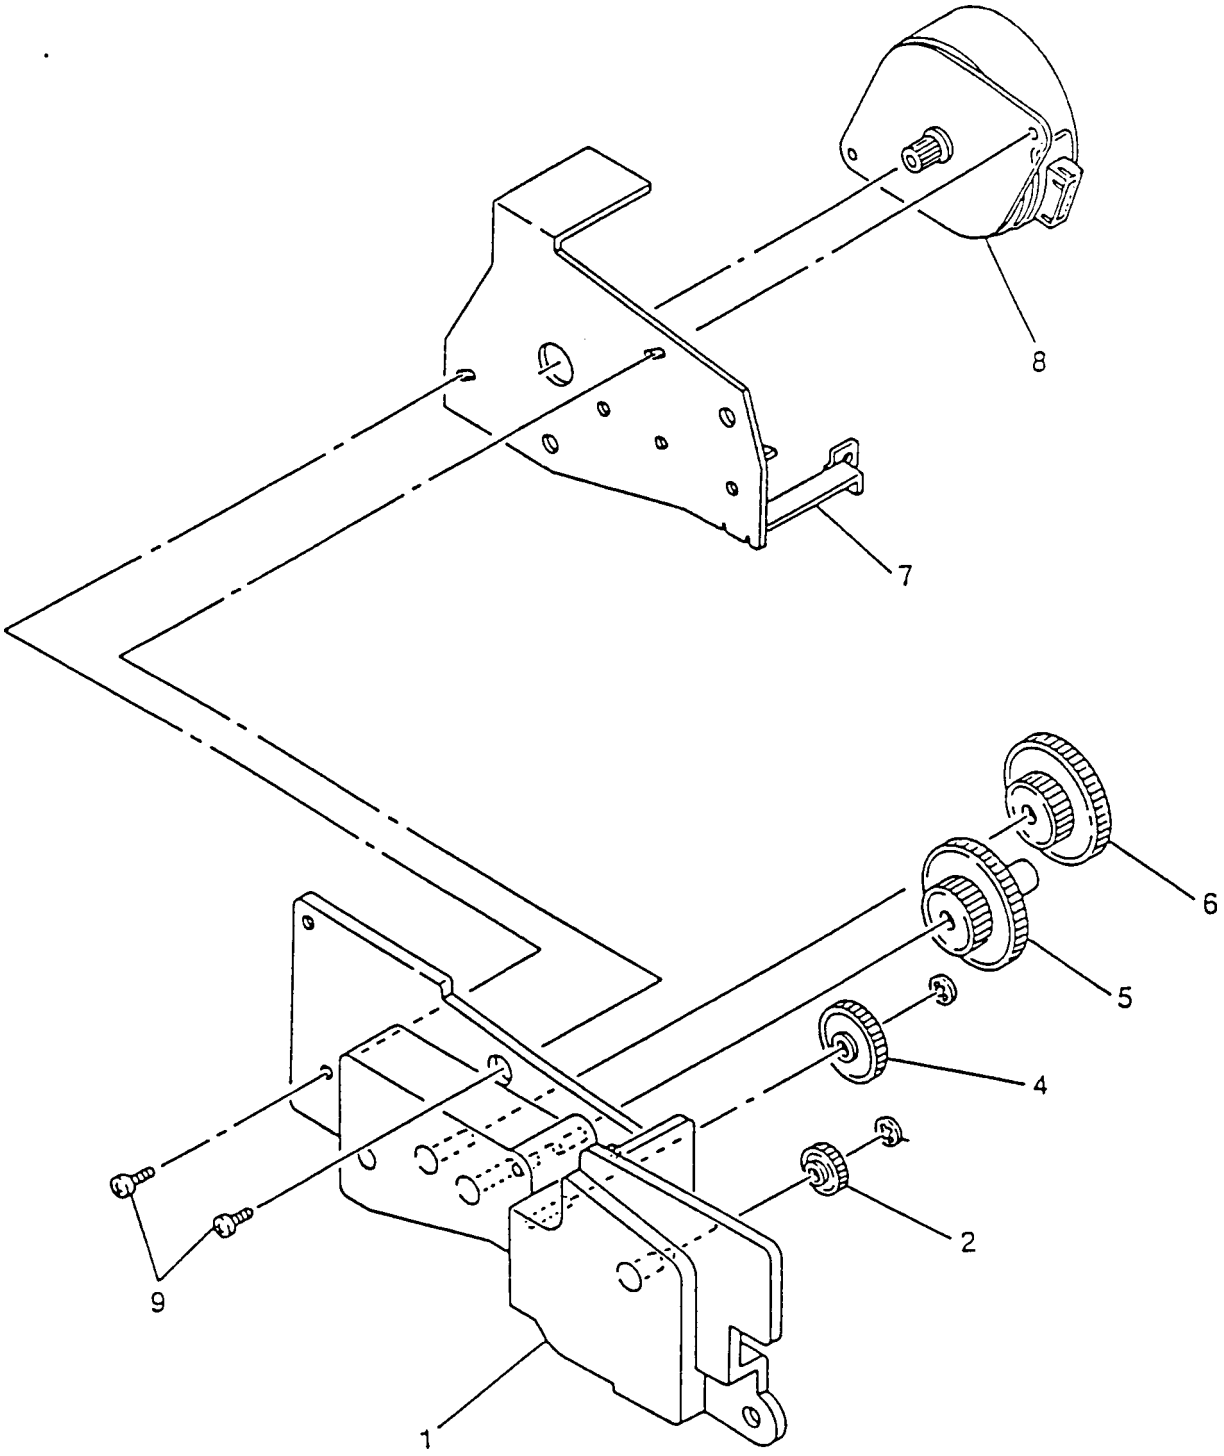

LISTE 5 - DETAIL B: MOTOR, SCAN ASSY (TABLE 5 - DETAIL B: MOTOR, SCAN ASSY)

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
1	SCAN FRAME	2PP3512-4441P1
2	GEAR (Z16)	4PP3527-5034P1
4	GEAR (Z23)	4PP3522-3475P1
5	GEAR (Z22/49)	4PP3512-4436P1
6	GEAR (Z24/51)	4PP3512-4438P1
7	SCAN BRACKET	3PP3512-4442P1
8	SCAN MOTOR	4YB3512-1991P1
9	SCREW	+D3-8-F

ZEICHNUNG 6 - DETAIL C: PAPER COVER ASSY (FIGURE 6 - DETAIL C: PAPER COVER ASSY)

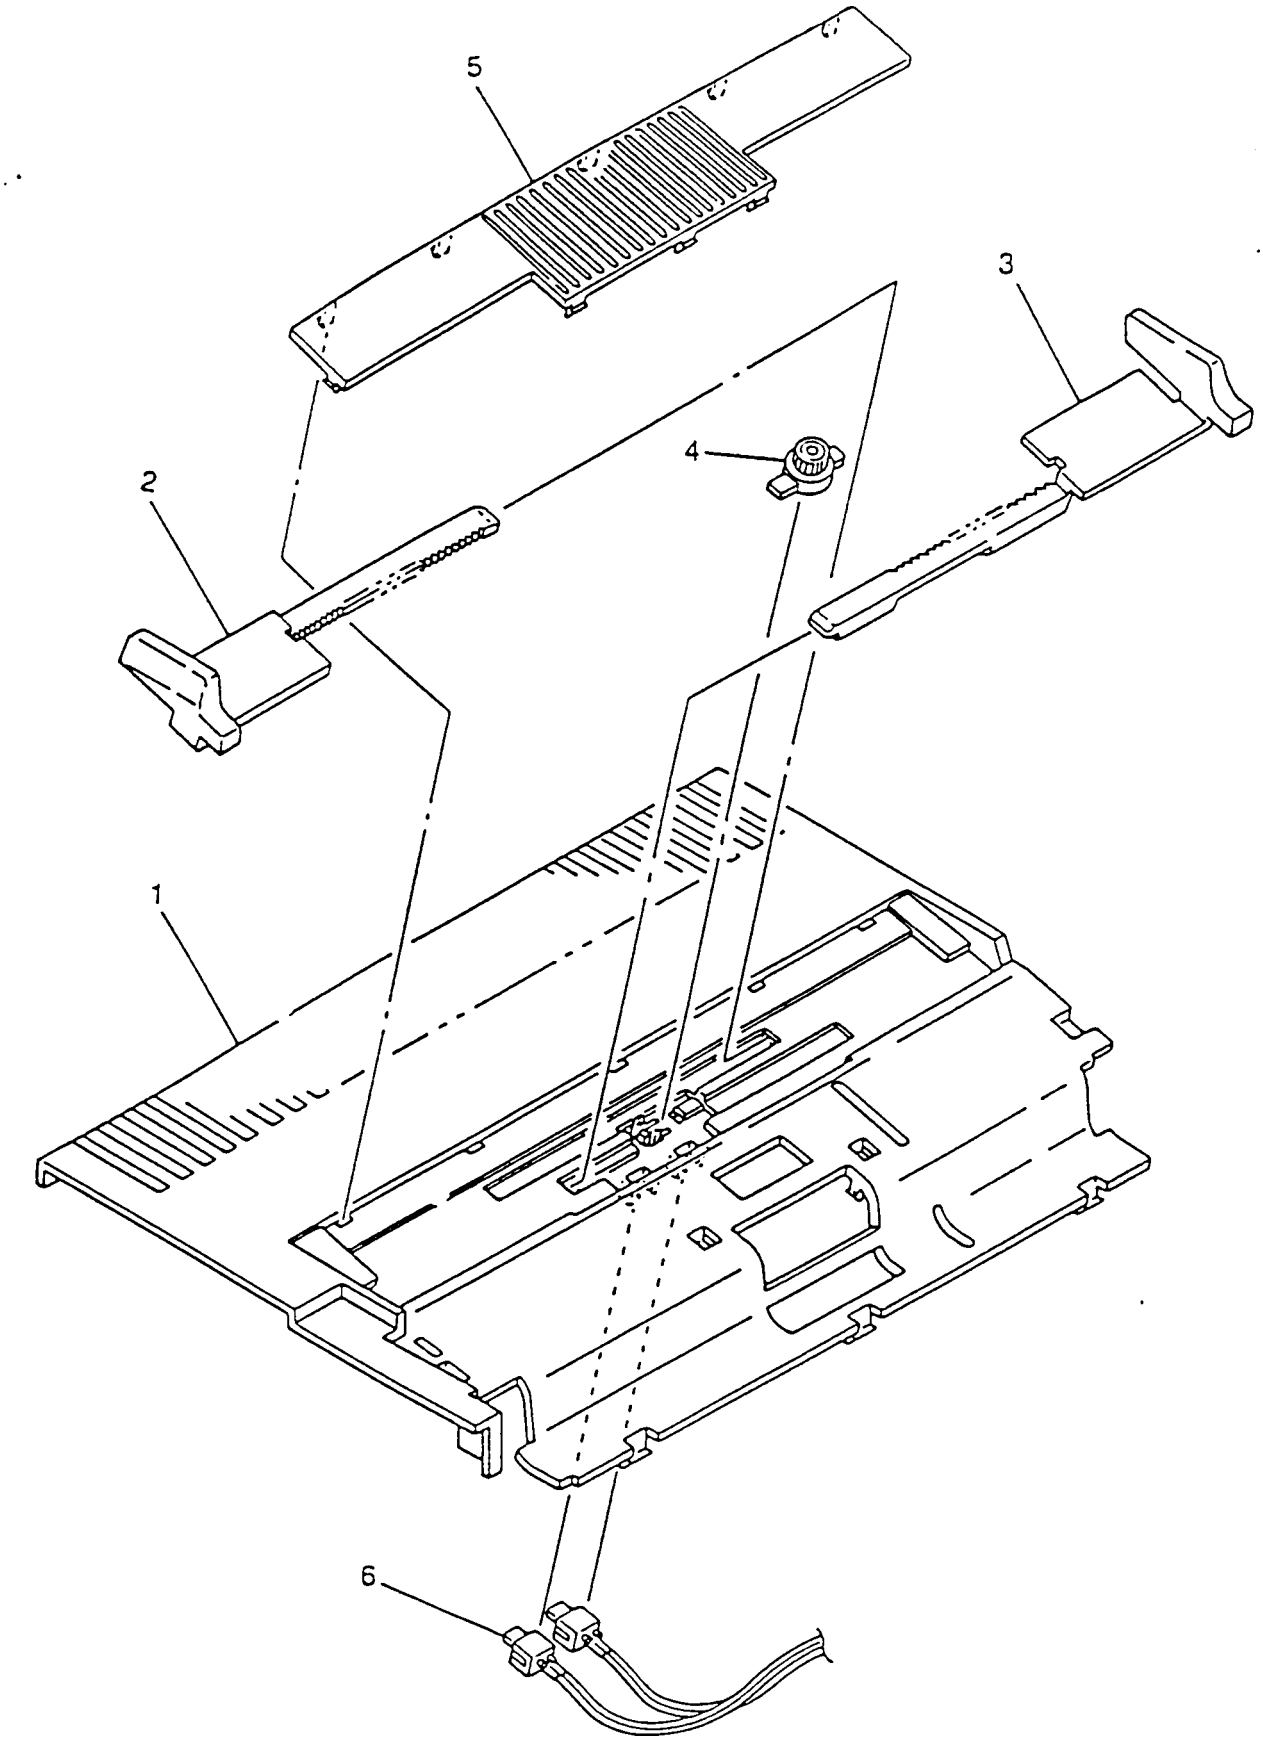

LISTE 6 - DETAIL C: PAPER COVER ASSY (TABLE 6 - DETAIL C: PAPER COVER ASSY)

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
1	PAPER COMPARTMENT COVER	1PP3512-4495P1
2	DOCUMENT GUIDE (R)	2PP3512-4464P1
3	DOCUMENT GUIDE (F)	2PP3512-4463P1
4	DAMPER GEAR	4YB3527-1037P1
5	DOCUMENT GUIDE COVER	2PP3512-4465P1
6	CABLE	4YS3512-2018P1

ZEICHNUNG 7 - PRINTING AND PAPER DRIVE ASSY
(FIGURE 7 - PRINTING AND PAPER DRIVE ASSY)

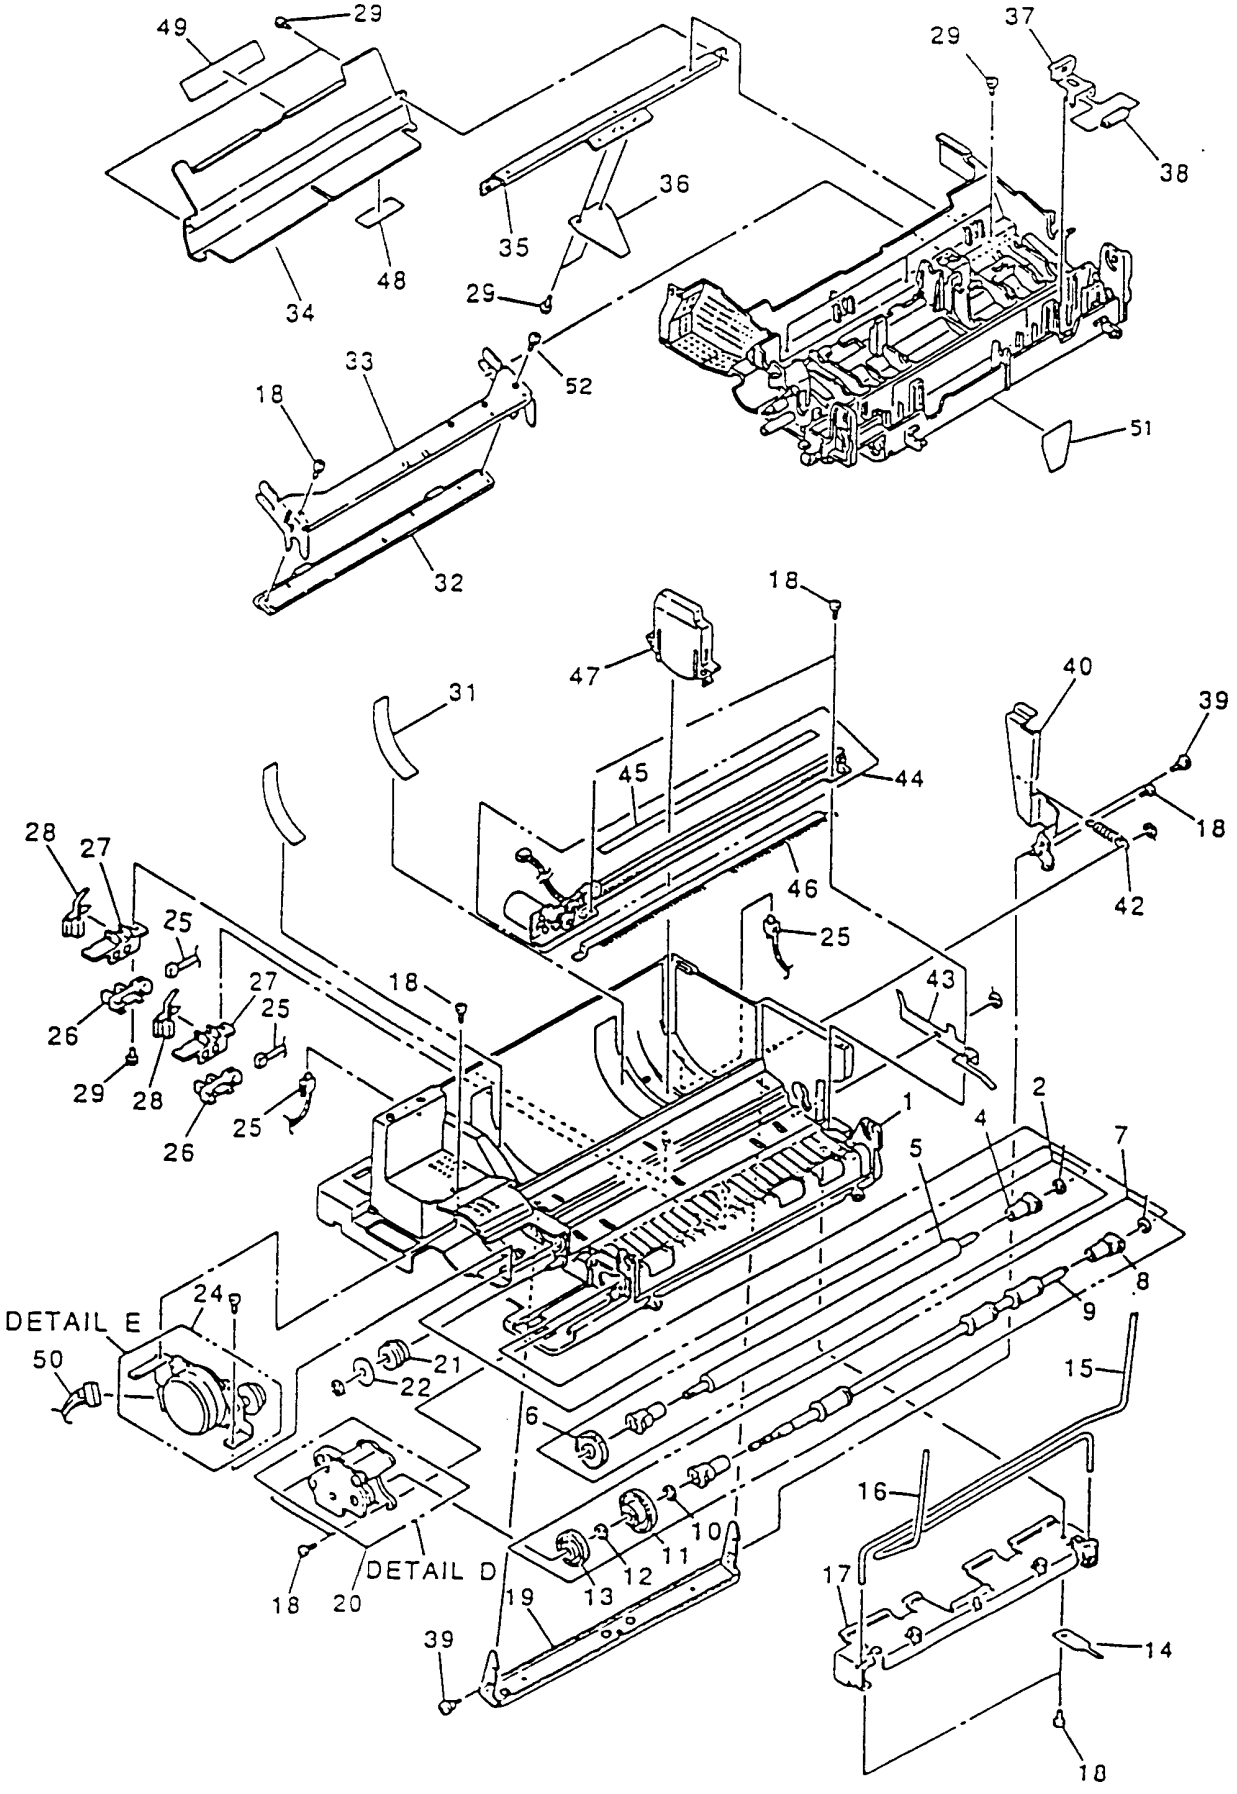

LISTE 7 - PRINTING AND PAPER DRIVE ASSY (TABLE 7 - PRINTING AND PAPER DRIVE ASSY)

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
1	MECHANICAL FRAME (L)	1PP3512-4453P1
2	PRINT ROLLER ASSY (ENTHÄLT NR. 3-6)	3PA3512-4566G1
4	METAL BUSHING	4PP3512-4450P2
5	PRINT ROLLER	3PP3512-4444P1
6	GEAR (Z44)	4PP3527-5037P1
7	ROLLER EXIT ASSY (ENTHÄLT NR. 3,8-13)	3PA3512-4564G1
8	METAL BUSHING	4PP3512-4450P1
9	EXIT ROLLER	3PP3512-4448P2
10	E-RING	RE5-SUS
11	CLUTCH GEAR (Z27)	3PB3526-3077G1
12	E-RING	RE4-SUS
13	ROLLER GEAR (Z18)	3PP3526-3080P1
14	EARTH PLATE (EX)	4PP3512-4603P1
15	TORSION BAR (R)	3PP3512-4485P9
16	TORSION BAR (L)	3PP3512-4486P9
17	TORSION BAR HOLDER	2PP3512-4487P1
18	SCREW	+D3-6-F
19	RELEASE HOOK (R)	3PP3512-4489P1
20	GEAR BOX ASSY (SIEHE SEITE 20 + 21)	3PA3512-4565G1
21	PULLEY (Z31/27)	4PP3512-3732P1
22	NYLON WASHER	4PP3512-4529P1
24	MOTOR AND GEAR ASSY (SIEHE SEITE 22 + 23)	3PA3512-4563G1
25	CABLE, MCNT-SW3	4YS3512-1966P1
26	PHOTO SENSOR	4YB3512-1987P1
27	SENSOR BRACKET	3PP3512-4537P1
28	SENSOR LEVER	4PP3512-4496P1
29	TAPPING SCREW	+BTP(WH)3-8-F
32	THERMAL HEAD	4YB3512-1985G1
33	THERMAL HEAD BRACKET	3PP3512-4483P1
34	GUIDE PLATE (R)	3PP3512-4481P1
35	THERMAL HEAD SPRING PLATE	3PP3512-4482P1
36	THERMAL HEAD SPRING	4PP3512-4476P1
37	PINCH EXIT SPRING	4PP3512-4492P1

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
38	PINCH EXIT ROLLER	4PP3512-4212P1
39	SHOULDER SCREW	4PP3512-3367P2
40	THERMAL HEAD RELEASE LEVER	3PP3512-4490P1
42	RELEASE SPRING (R)	4PP3512-4569P1
43	EARTH PLATE (R)	3PP3512-4523P1
44	CUTTER UNIT	4YB3512-1976G2
45	CUTTER UNIT LABEL	4PP3512-4619P2
46	EARTH BRUSH (L)	3PP3512-4567P1
47	PAPER ROLL ALIGNER	3PP3512-3725P1
48	OVER HEAT LABEL	4PP3512-3275P2
49	PAPER LOAD LABEL	3PP3512-3986P5
50	CABLE, MCNT-MOTOR	4YS3512-1968P2
51	EXIT MYLER	4PP3512-4644P1
52	SHOULDER SCREW	4PP3512-4604P1

ZEICHNUNG 8 - DETAIL D: GEAR BOX ASSY (FIGURE 8 - DETAIL D: GEAR BOX ASSY)

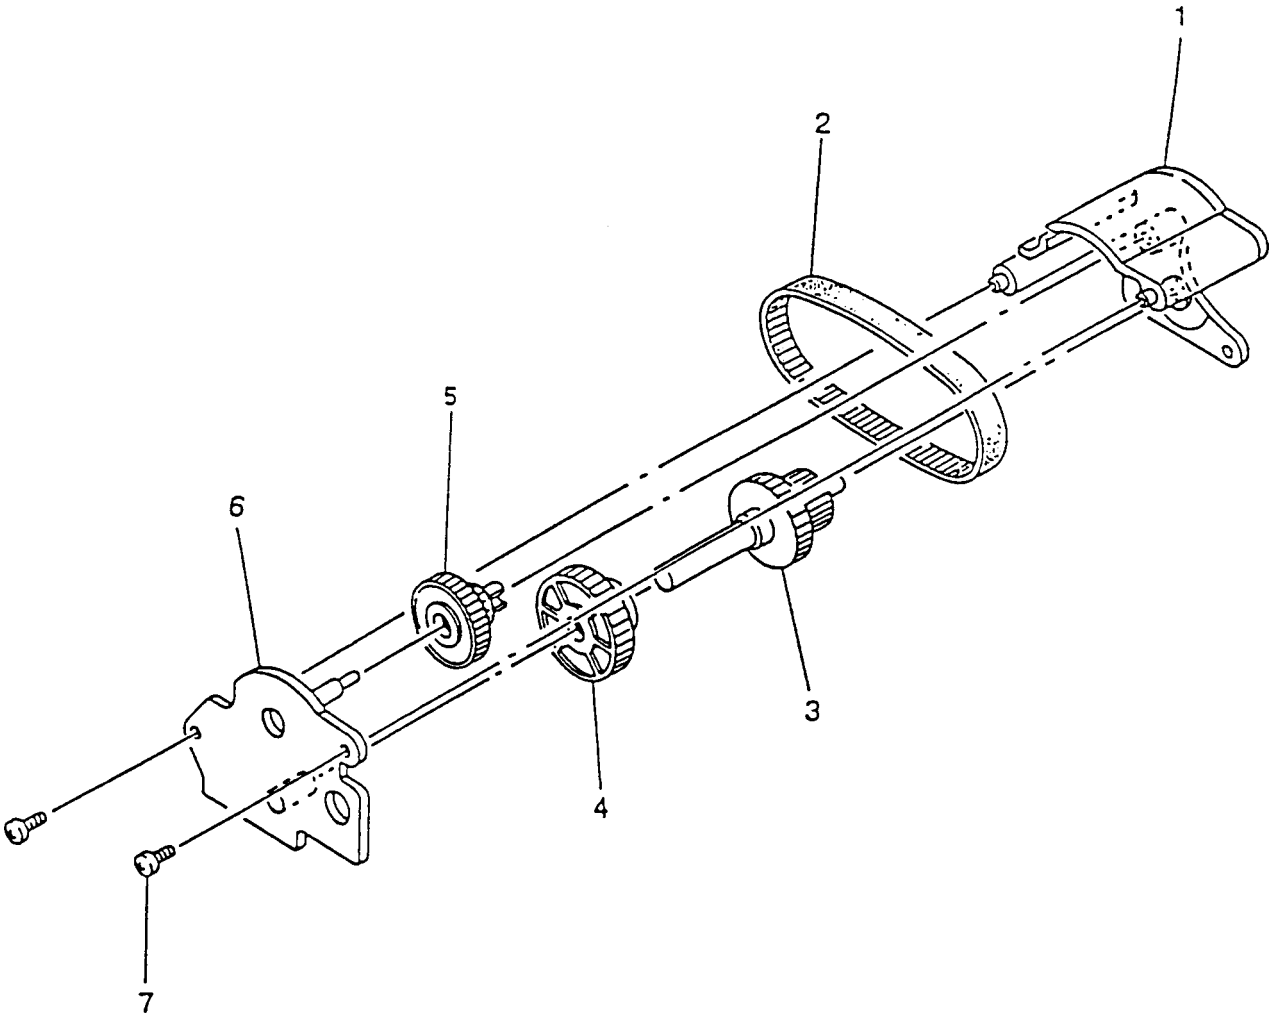

LISTE 8 - DETAIL D: GEAR BOX ASSY (TABLE 8 - DETAIL D: GEAR BOX ASSY)

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
1	EXIT FRAME (B)	3PP3512-4440P1
2	EXIT BELT	152A1001P0036
3	PULLEY GEAR	4PA3512-4615G1
4	CLUTCH GEAR (Z27)	3PB3526-3077G1
5	GEAR (Z11/22)	3PP3526-3093P1
6	EXIT FRAME (A)	3PP3512-4439P1
7	TAPPING SCREW	+BTP(WH)3-8-F

ZEICHNUNG 9 - DETAIL E: MOTOR AND GEAR ASSY
(FIGURE 9 - DETAIL E: MOTOR AND GEAR ASSY)

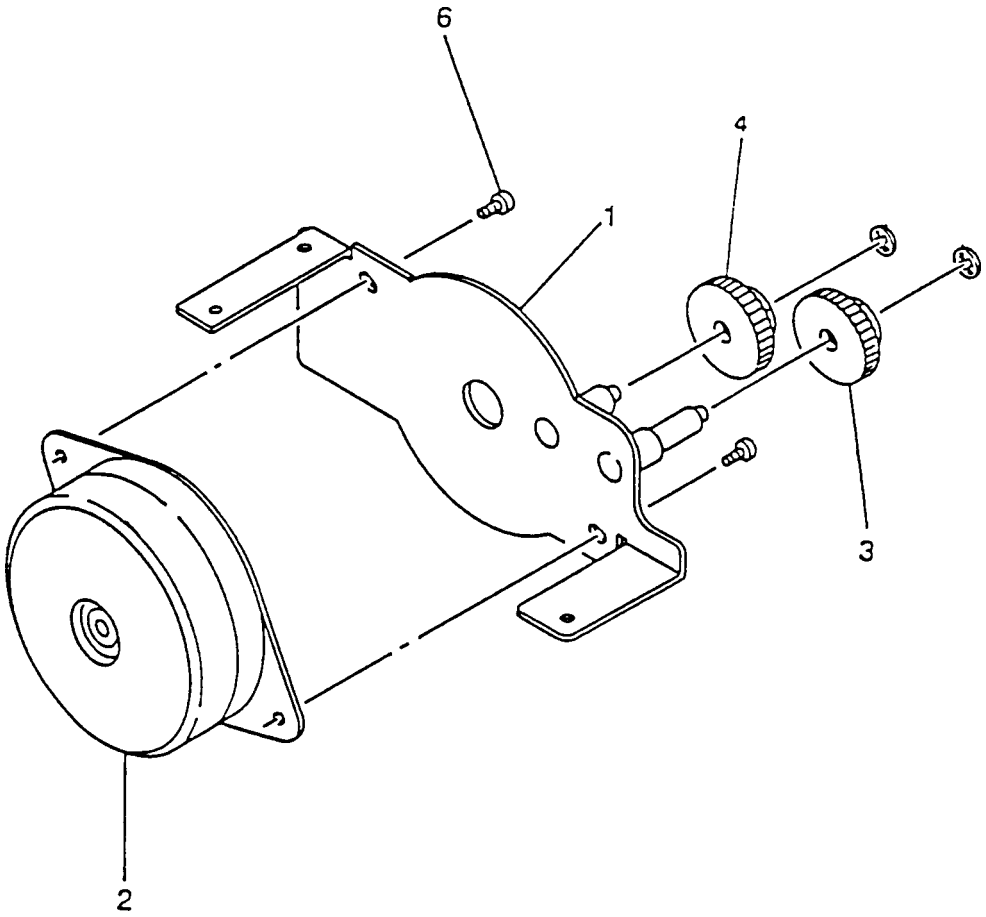

LISTE 9 - MOTOR AND GEAR ASSY (TABLE 9 - MOTOR AND GEAR ASSY)

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
1	PRINT MOTOR BRACKET	2PP3512-4432G1
2	SCAN MOTOR	4YB3512-1991P1
3	GEAR (Z36/47)	4PP3512-4435P1
4	GEAR (Z19/48)	4PP3527-5032P1
6	SCREW	+D3-6-F

ZEICHNUNG 10 - POWER SUPPLY UNIT (FIGURE 10 - POWER SUPPLY UNIT)

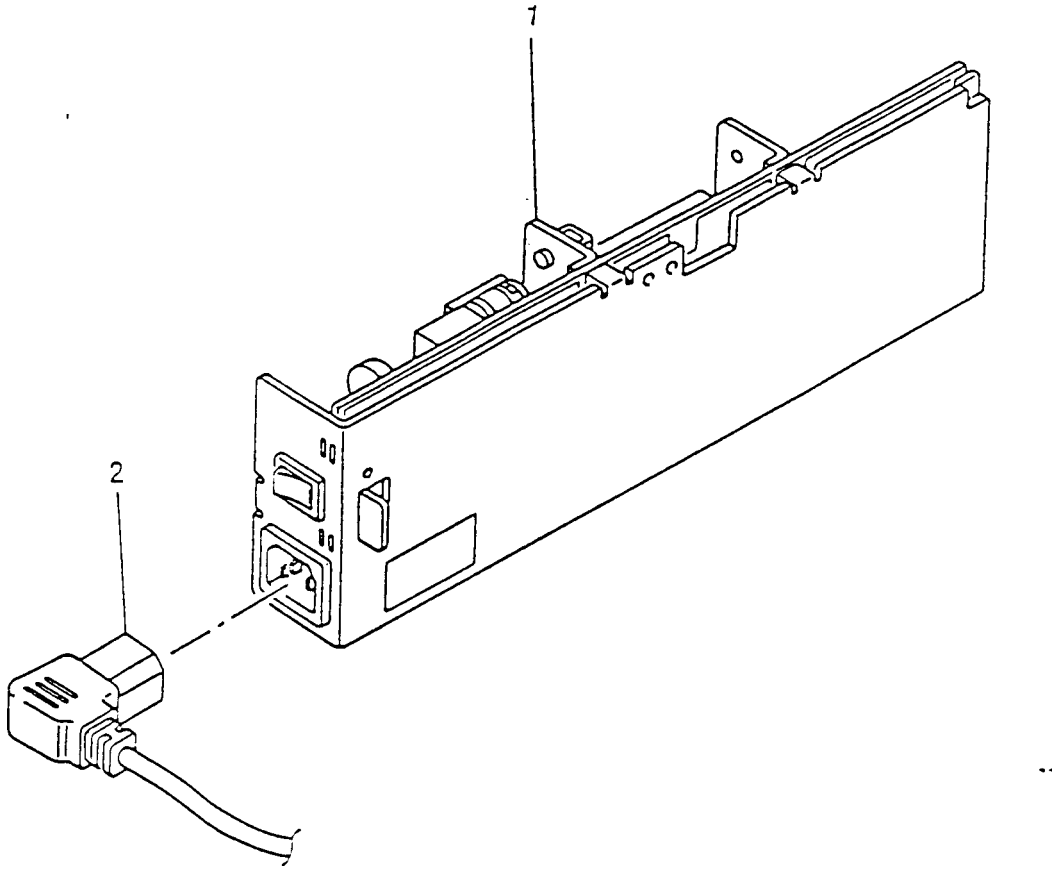

LISTE 10 - POWER SUPPLY UNIT (TABLE 10 - POWER SUPPLY UNIT)

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
1	POWER SUPPLY UNIT	4YB3512-1962G1
2	AC CORD	236A6058P0001 OR 236A6057P0001

ZEICHNUNG 11 - CABLES (FIGURE 11 - CABLES)

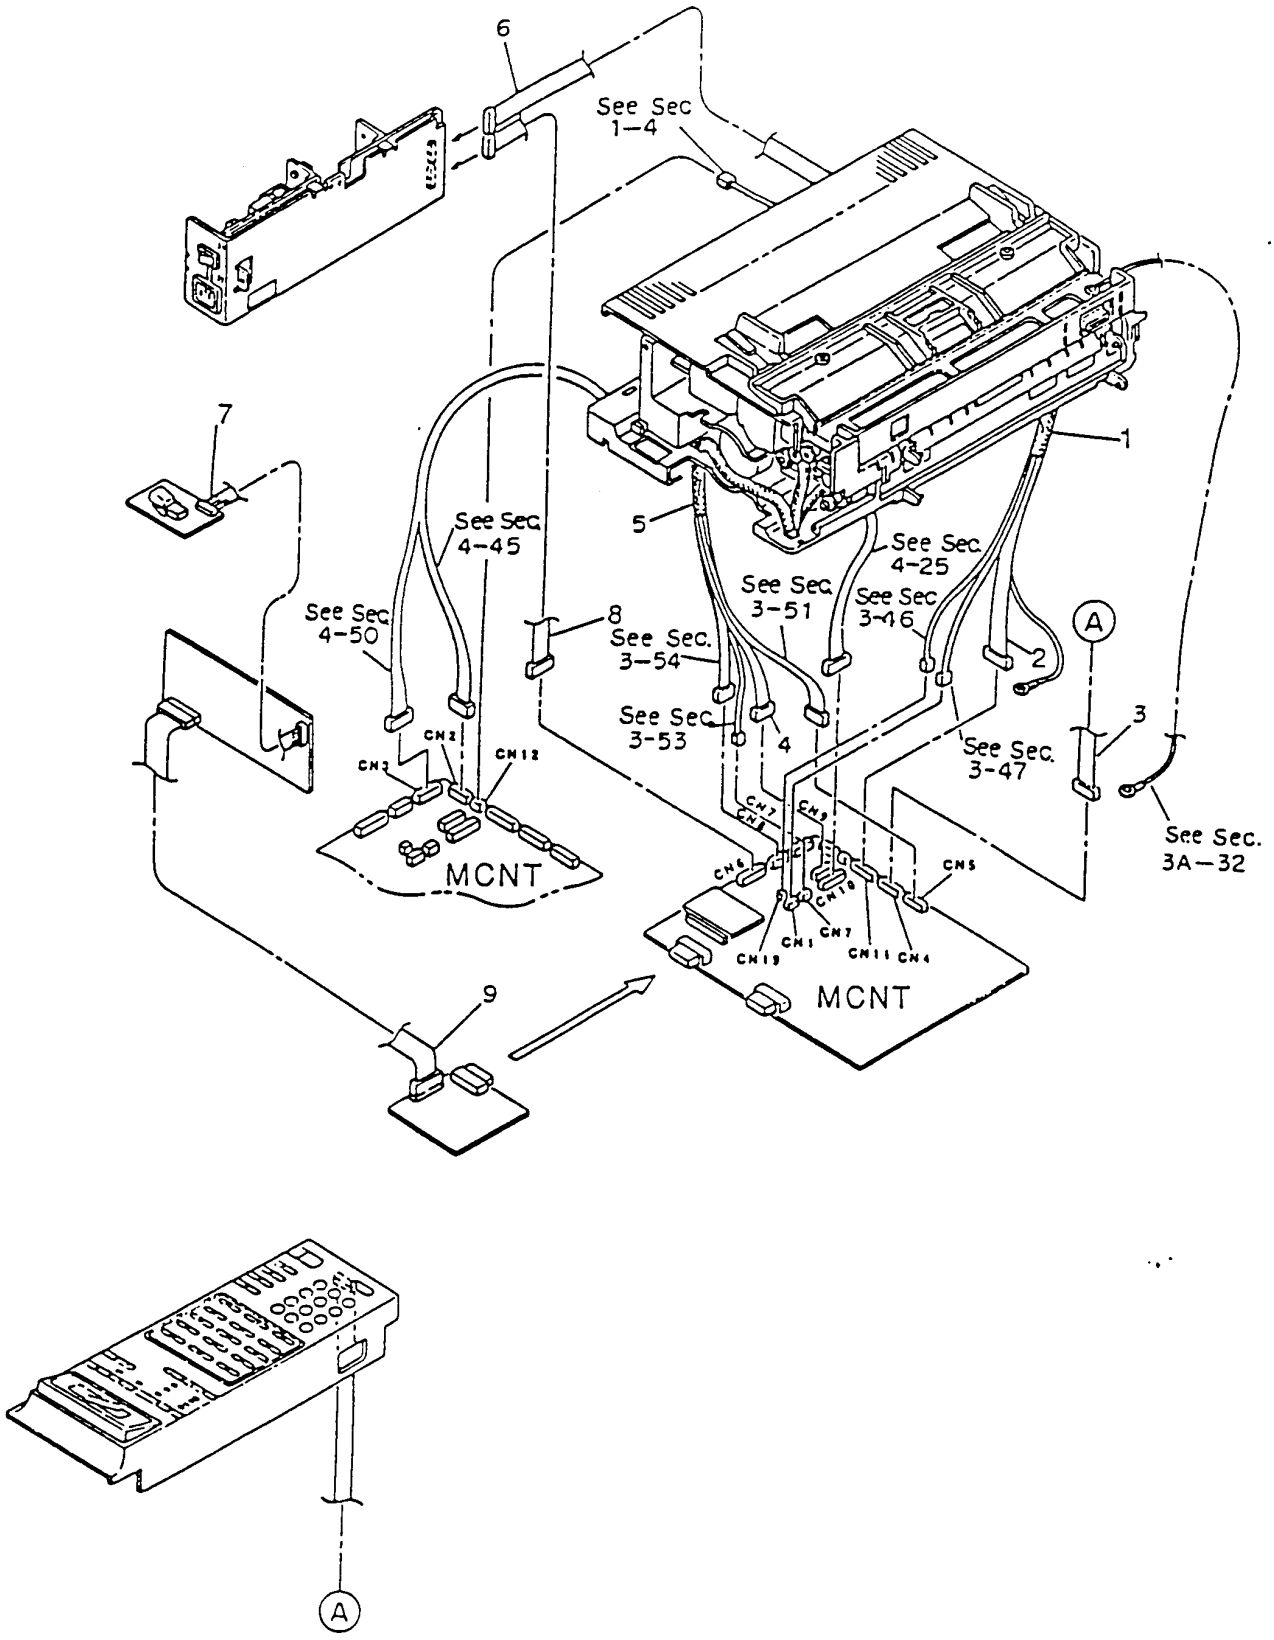

LISTE 11: CABLES (TABLE 11: CABLES)

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
1	NET TUBE (F)	4PP3522-3683P2
2	CABLE, MCNT-HEAD	4YS3512-1970P2
3	CABLE, OPE-MCNT	4YS3512-1967P1
4	CABLE, MCNT-SW1	4YS3512-1965P1
5	NET TUBE (R)	4PP3522-3683P4
6	CABLE, PSU HEAD	4YS3512-1970P3
7	CABLE, NCU(A)-HOOK SW	4YS3522-1210G4
8	CABLE, MCNT-PSU	4YS3512-1977P1
9	CABLE, NCU(A)-NCU(B)	4YS3512-1969P1